

### **Engine - 6000 miles**

- 1 Renew plugs
- 2 Renew engine oil & filter, check for oil leaks
- 3 Check fan belt tension
- 4 Check cooling/heater system for leaks, worn hoses

### **Engine - 12000 miles**

- 5 Check ignition timing, operation of vacuum unit, lubricate distributor, clean & check cap
- 6 Check plug leads & coil
- 7 Check alternator output
- 8 Clean & lubricate air filter
- 9 Clean fuel filter in fuel pump & change 2no in-line fuel filters
- 10 Check valve clearances
- 11 Check & clean rocker box breather valve
- 12 Lubricate accelerator control linkage & pedal pivot

### **Underbody & Exterior – 6000 miles**

- 13 Check fuel system pipework and unions for chafing, leaks, security & condition
- 14 Check front discs & pads / rear drums & shoes for wear
- 15 Grease wheel studs & contact surfaces with copperslip
- 16 Check brake pipework and unions for chafing, leaks & condition
- 17 Check brake servo hoses for security & condition
- 18 Check adjustment of foot & handbrakes, lubricate brake pedal pivot
- 19 Check & lubricate handbrake mechanical linkage & cable guides
- 20 Top up gearbox and differential oil levels, check for leaks
- 21 Check & lubricate steering rack & rack tensioner nut
- 22 Check & lubricate steering UJ's, chassis bushes, upper ball joints & trunnions
- 23 Check condition & security of steering gear, joints & gaiters
- 24 Check, lubricate & adjust clutch cable, lubricate pedal pivot
- 25 Check shock absorbers for action & leaks
- 26 Check propshaft & halfshaft coupling bolts
- 27 Grease propshaft U/J's & halfshaft inner/outer UJ's
- 28 Check driveshaft gaiters
- 29 Check suspension system for condition & security
- 30 Grease suspension bush bolts (prevents seizure of bolt in bush sleeve)
- 31 Grease rear nub stud bushes (ditto)
- 32 Check exhaust system for leaks & security
- 33 Check condition of tyres and torque wheel nuts
- 34 Lubricate all locks & hinges (use white spray grease for door hinges), do not lubricate steering column lock
- 35 Check wipers & washer

### **Every 37500 miles**

- 1 Renew air filter in brake servo unit
- 2 Clean crankcase emission control valve
- 3 Replace brake fluid